



- **Digital X-Ray High Voltage Power**
- **50KV, 75W**
- **Controllable Voltage & Current**
- **Controllable filament Current**
- **Filament current limiting Protection**
- **Overvoltage & Overcurrent Protection**

HVP50P75-D is an ultra-compact X-Ray generator module with high voltage packaging and surface mount fabrication techniques and coupled with proprietary encapsulation technology producing. It uses a closed-loop filament control circuitry to provide a highly regulated beam current, offering tight regulation, high stability and low ripple, HVP50P75-D can provides users local and remote analog control to set beam voltage, emission current and filament current limit, and also has intelligent surge suppression protection circuit, which can suppress the start current spike effectively.

### Typical Applications

Powering grounded cathode X-ray tubes from Kevex, Oxford, RTW, Superior, Varex, Petrick, Trufocus and the other global brands.

### Specifications

|                            |   |
|----------------------------|---|
| Input                      | 24V±10%VDC , MAX 5.0A                                 |
| Output                     | 0-50KV, 0 -2mA , MAX 75 W                             |
| DC Supply                  | 0-5VDC, 0-3.5A , adjustable limit                     |
| Efficiency                 | 80%, typical  |
| Voltage Control            | 0.01% (load)  |
| Current Control            | 0.01% (load)  |
| Stability                  | 0.05% per 8 hours after 1/2 hour warm -up.            |
| Ripple Voltage             | 0.1% p -p of maximum rated output voltage, 50kV units |
| Voltage & Current Monitors | 0V-10VDC ~ 0-Vmax & 0-Imax. Zout=1K Ω, Accuracy ±1%   |
| Temperature Coefficient    | 0.01%/ °C   |
| Surge Current at Turn-on   | 3.5A Max≤5A @25°C (Typical)                           |
| Environmental              | Operational: 0°C - 50°C , Storage: -40°C - 85°C       |
| Weight                     | 2.3kg   |
| Size                       | 217.9 X75.6 X100 (mm)                                 |

**Power Input Connector(JB1 1-2)**

|   |                    |                  |
|---|--------------------|------------------|
| 1 | 24VDC              | 24 VDC @ 5A, Max |
| 2 | 24VDC Return (GND) | GND              |


**Filament Connector(JB1 3-4)**

|   |                  |                 |
|---|------------------|-----------------|
| 1 | Filament Out (+) | 5VDC @3.5A Max  |
| 2 | Filament Out (-) | GND (Filament ) |


**DB15 Input & Output Connector(JB4)**

|    |                           |   |
|----|---------------------------|---|
| 1  | Monitor Return            | Signal Ground                             |
| 2  | Voltage Monitor           | 0-10V = 0-Vmax, Zout=1KΩ                  |
| 3  | Current Monitor           | 0-10V = 0-Imax, Zout=1KΩ                  |
| 4  | Interlock Output          | Connect 12V HVON bulb to pin 15 to enable |
| 5  | +10 Volt Reference        | +10 Volts at 1mA, maximum                 |
| 6  | Filament Monitor          | 1V=1A, Zout=1KΩ                           |
| 7  | Voltage Program Input     | 0-10 volts = 0 to full scale, Zin=10M Ω   |
| 8  | Local Voltage Program     | 0-10 volts, screwdriver adjust            |
| 9  | Filament Limit Setpoint   | 1 volt = 1 A                              |
| 10 | Current Program Input     | 0-10 volts = 0 to full scale, Zin=10M Ω   |
| 11 | Local Current Program     | 10 turn pot, screwdriver adjust           |
| 12 | NC                        | Undefined                                 |
| 13 | NC                        | Undefined                                 |
| 14 | Filament Preheat Setpoint | 1 volt = 1 A                              |
| 15 | Interlock Return          | Interlock Ground                          |


## **Operating Setup:**

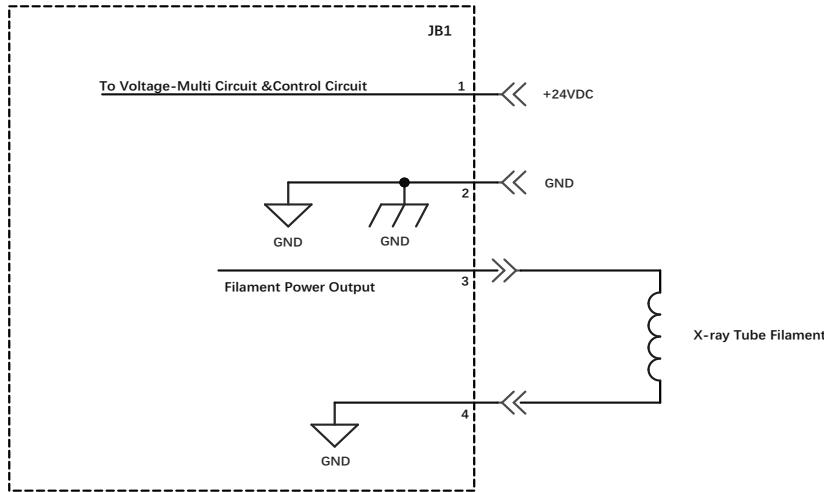

## Safe interlock optional configurations 1

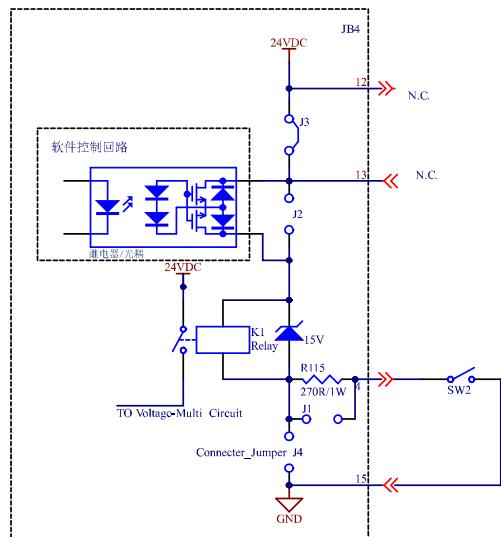


## Safe interlock optional configurations 2

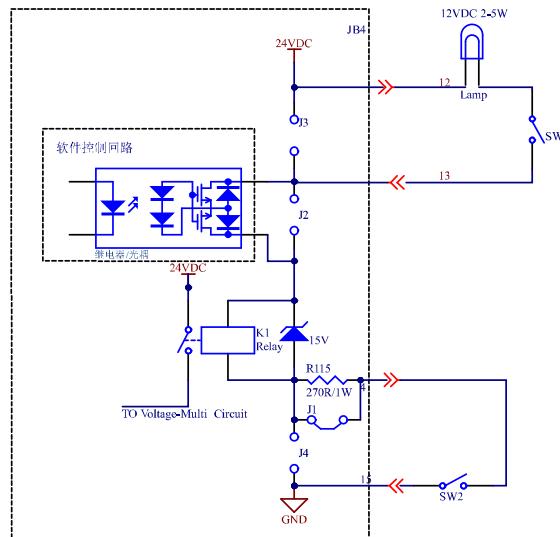

**Note:** 1 Factory default disconnect the internal jumper J1. When the pilot lamp needs to be connected, it needs to connect the internal jumper J1.

- 2 Do not directly connect pin4(JB4-4) to GND(JB4-15) when the internal jumper J1 is connected, otherwise the Power will be damaged.
  - 3 Factory default connect internal jumper J3, it can be controlled by disconnected the external switch, or controlled by connect an external power supply (+ 12V) from pin13 to achieve interlock ground.
  - 4 **In order to ensure safety, the external interlock needs to be closed when using the digital interface to control the high-voltage power supply.**

HVP50P75-D provides three standard interfaces: USB, RS-232 and Digital Ethernet interface, with these standard interfaces, users can easily realize the control operation of the high voltage, it can save more development cost & time, and the overall function of the product can also get a big enhance.

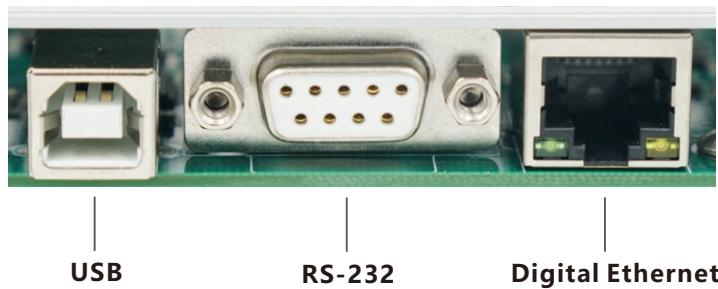

### SIZE [mm] :

